




**SILENT  
KNIGHT**

## Model 5700 Basic Operating Instructions

These Instructions must be framed and displayed next to the 5700 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems. Test the system in accordance to NFPA 72. Refer to Installation Manual P/N 151295.

Operation	Task to Perform
Silence Alarms and Troubles	Press  then enter a code if prompted. Silence LED will light.
Reset Alarms	Press  then enter a code if prompted.
Acknowledge Alarms and Troubles	Press  then enter a code if prompted. When the Alarm or Trouble is acknowledged an A will appear in the annunciator display as shown Below. 
View Alarms and Troubles	Press the  or  button to view Alarms and Troubles.
Conduct a Fire Drill	<ol style="list-style-type: none"> <li>1. Press  to access Main Menu, then enter a code if prompted.</li> <li>2. Then press  to select System Tests.</li> <li>3. Enter code if prompted, then press  to select Fire Drill.</li> <li>4. Press  to start the fire drill.</li> <li>5. Press  to end the fire drill.</li> </ol>
View a Points Status	<ol style="list-style-type: none"> <li>1. Press  to access Main Menu, then enter a code if prompted.</li> <li>2. Then press  to select Point Functions.</li> <li>3. Enter code if prompted, then press  to select Point Status.</li> <li>4. Select the module the device is located on by using the  or . Then press .</li> <li>5. Enter the point number.</li> </ol>
Check Detector Sensitivity	<ol style="list-style-type: none"> <li>1. Follow steps 1 through 5 for viewing a point status.</li> <li>2. Press  to view detector sensitivity.</li> </ol>
Set Time and Date	<ol style="list-style-type: none"> <li>1. Press  to access Main Menu, then enter a code if prompted.</li> <li>2. Then press  to select Set Time &amp; Date. Enter a code if prompted</li> <li>3. Make changes in the fields on the screen as necessary.</li> <li>4. Press  if you wish to keep the changes.</li> <li>5. Press  to set the entered time and date.</li> </ol>
Enable / Disable a Point	<ol style="list-style-type: none"> <li>1. Press  to access Main Menu, then enter a code if prompted.</li> <li>2. Then press  to select Point Functions.</li> <li>3. Enter code if prompted, then press  to select Disable / Enable Pt.</li> <li>4. Select the module the point is located on by using the  or . Then press .</li> <li>5. Enter the point number.</li> </ol>
View Event History	<ol style="list-style-type: none"> <li>1. Press  to access Main Menu, then enter a code if prompted.</li> <li>2. Press  to select Event History.</li> <li>3. Press the  or  to view events in the history buffer.</li> </ol>
For Service call:	

Cut Along the Dotted Line

Cut Along the Dotted Line