

How to use the DVR search feature


1. First step is to right click and go to Main Menu then Click on Search.

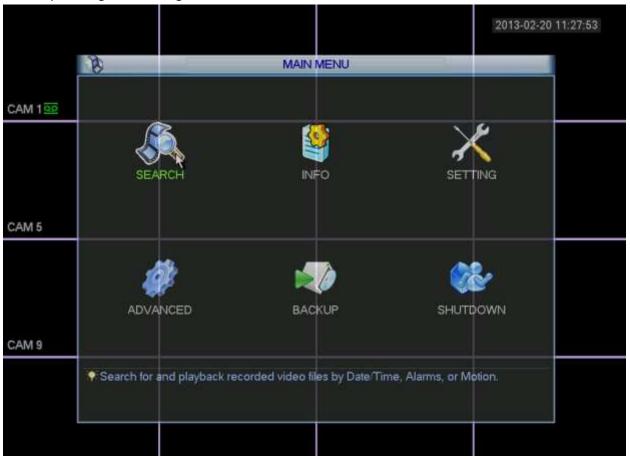


2. Next on the right hand side of the search screen select the date on the calendar. Days that have a recording on them will be highlighted in blue.

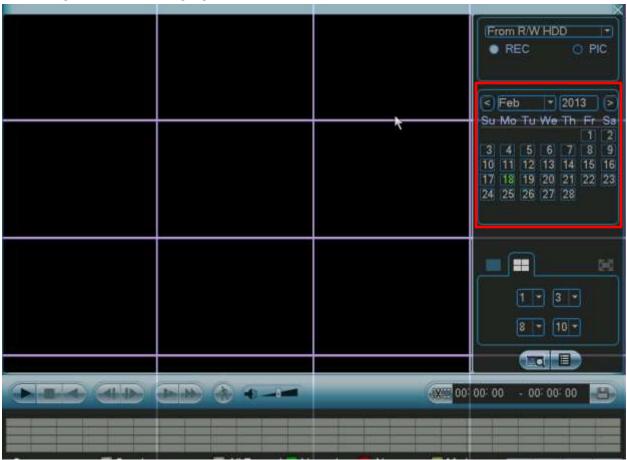

3. Next select your view type from 1/4/9/16/32 cameras to display. Then select the cameras that you would wish to view.

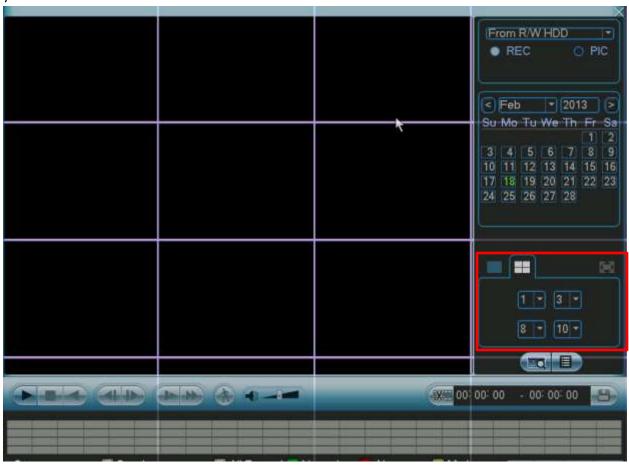

4. Select the type period that you would like to view on the bottom time bar(s). All regular recording will be in green, Motion detection recordings will be yellow, and are alarm recordings will be in red. The time of the recording will be displayed above the bars in a 24 hour clock fashion.

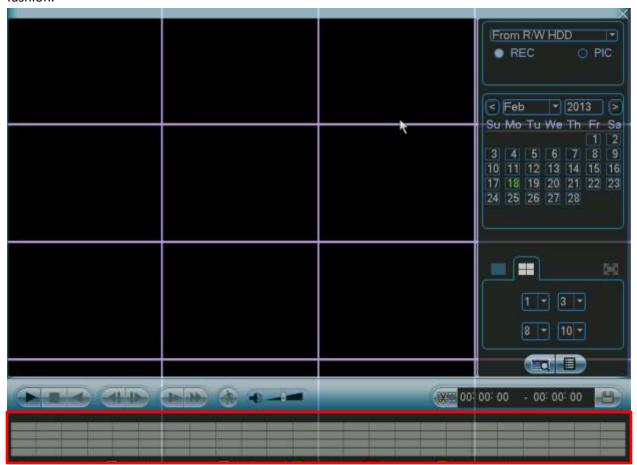

Last options in the search feature are the Play buttons and the backup feature.
Starting from left to right the buttons are as follow.
Play / Stop / Rewind / Skip back / Skip Forward / Slow play back / Fast playback / Motion Detection area / sound.

The Motion detection area is a box you can make on the play back for a single camera that will only show recordings for when there was motion in that particular area.

To do a quick backup of a recording on the right hand side of the play bar you can select and time range and then click on the floppy disk to start a local back up onto a flash drive.

